



PRODUCT BULLETIN



HAYMAN REESE TOWBALL MOUNT RANGE



- Range of 9 Towball Mounts
- Rated in drop and rise positions
- Range of drops/rises and lengths
- 3 Adjustable versions

Ensuring your car and trailer or caravan are level when towing is a key ingredient for a safe towing experience. If your car tow ball and trailer coupling are different heights, you may need to replace your tow ball mount with another height or even an adjustable unit to ensure they can be connected securely and safely.

The Hayman Reese range of Towball Mounts offers a range of solutions for this application. In addition to four drop offerings, ranging from 50-125mm, two extended length versions and three adjustable versions combine to make up the range. Another important feature of the new range is that all TBM's have been weight rated in both 'rise' and 'drop' positions.



TBM RANGE

**MORE HITCH
DROP + RISE RANGE**
All 3500kg Rated
All Length 200mm

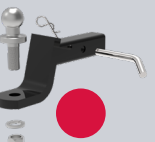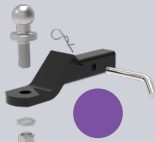




Drop: 50mm Drop: 75mm Drop: 100mm Drop: 125mm

**EXTENDED
LENGTH**
All 3500kg Rated
All Drop 50mm

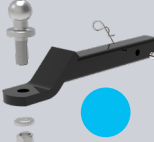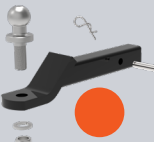

Length: 300mm Length: 350mm

**ADJUSTABLE
RANGE**

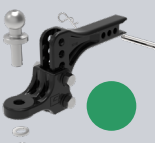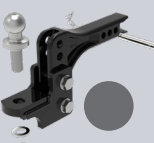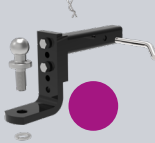

181mm / 2500kg 114mm / 3500kg 128mm / 3500kg

Packaging for the new range has been colour coded, helping to ensure product selection is as simple as possible



PRODUCT BULLETIN



TBM DETAILS


Item Code	DROP		RISE		Length
	Drop	Rating	Rise	Rating	
31400	50mm	3500kg	19mm	3000kg	200mm
31401	75mm	3500kg	44mm	2500kg	200mm
31402	100mm	3500kg	69mm	2000kg	200mm
31403	125mm	3500kg	94mm	1500kg	200mm
31404	50mm	3500kg	19mm	3500kg	300mm
31405	50mm	3500kg	19mm	3500kg	350mm
31409	181mm	2500kg	150mm	up to 1500kg	300mm
31410	up to 114mm	3500kg	up to 89mm	3500kg	up to 329mm
31413	up to 128mm	3500kg	up to 106mm	3500kg	up to 341mm

CUSTOMERS CAN DETERMINE WHICH TBM WILL SUIT THEIR NEEDS BY FOLLOWING 3 SIMPLE STEPS

SELECTING THE CORRECT TOWBALL MOUNT


STEP 1

Measure from ground to top of receiver tube (A)*

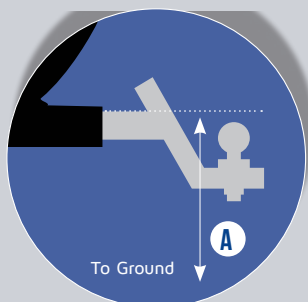

STEP 2

Measure from ground to lower Towball Mount Surface

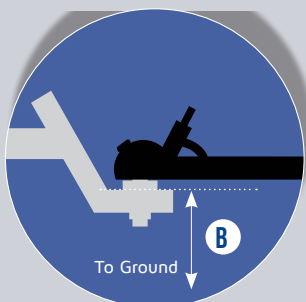

STEP 3

(A) - (B) = (C)
Use C to select best suited drop or rise Towball Mount

